



Inspection ladder

- You can only open the ladder from the bottom with a ruko lock.

Universal Ladder

- You can open the ladder from bottom with a ruko lock AND you can open the ladder from the top with a release pin.

Fire Escape Ladder

- You can only open the ladder from top or each level with a release pin.

* The correct length of the ladder should be the measure length (blue line on drawing) deducted the distance length from the ground (0,4m)

Ruko lock



Ruko lock with wire



Releasepin



Further information:

Skinner Innovations
+1 (801) 766 4782
info@skinnerinnovations.com